



INGENIOUS FINISHING

BOTAMENT[®]
SYSTEMBAUSTOFFE □□□□

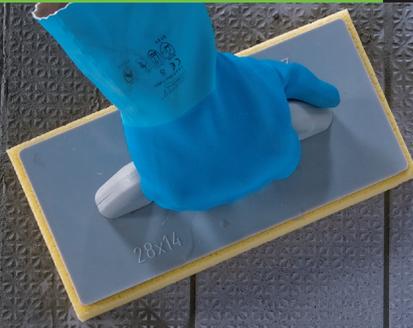

- Versatile use
- KTW / KSW-approved
- Very high chemical and mechanical resistance
- Revolutionary colour-fastness

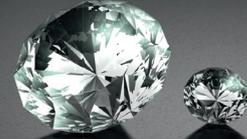

Application Instructions for the Wash Set / Multifuge Diamond

- Ambient and substrate temperature must be at least **10 °C**
- Application becomes even easier when temperatures are **17 °C and above**
- Wear suitable **protective clothing**
- Add component B to component A and mix both components together for **at least 3 minutes** using a slowly rotating mixer
- In order to avoid any mixing mistakes **repot** the ready-mixed Multifuge Diamond after mixing into a clean container (scrape the original mixing bucket clean) and stir once more
- Use a **rubber grouting float or another special grout float** to apply the grout to the joints
- When filling the joints the joint mortar is spread across the **entire tile cover**
- Pre-wash the surface with a hydro sponge first (for profiled tiles use a soft fleece sponge) **and when grouting is complete immediately wash off until clean**
- To make the washing process easier we recommend using **two wash tubs** (pre-wash and final wash)
- **Renew the wash water frequently**
- To make replacing the sponges easier we recommend using **sponge floats that allow sponge changes**, e.g. floats with Velcro fastenings
- **Do not try to remix or stir grouting material** that has started to set!
- Should any traces of grout residue remain on the tiles the day after grouting they can simply be washed off using a **diluted vinegar cleaner**. At a later date residue removal is going to be a lot more difficult. More information regarding this can be found in our technical datasheet and in the manufacturer's instructions of the cleaning agent used.

